



ADD THIS DOCUMENT TO YOUR OMNI LT OWNER'S MANUAL

Description

The OmniLT Version 2.4 firmware adds the following new feature:

- Support for new humidity zone

Humidity Zone Type

A new “humidity” zone has been added which supports the Model 31A00-2 Indoor/Outdoor Temperature and Humidity Sensor for sensing and/or reporting the relative humidity from 0 to 100 percent.

The humidity level (0-100%), the low humidity setting, and high humidity setting can be viewed and modified using the temperature menu. To enter the temperature menu, from the top-level display or from the main menu, press the 5 (TEMP) key. The humidity zone can be specified by entering the zone number followed by the '#' key, or by pressing the arrow keys to scroll through the list of temperature and humidity zones. Press the '#' key when the desired temperature zone is shown.

INDOOR:	HUMI: 75
LOW: 10	HIGH: 90