



HOME AUTOMATION, INC.

**Model 32A30
Touchscreen Hub**

Installation Manual

**Document Number 32I30-1 Rev B
March, 2008**

INTRODUCTION

The HAI Touchscreen Hub is used to provide power, communications, and a video signal to HAI OmniTouch touchscreens. Up to eight (8) OmniTouch touchscreens, with or without video, can be connected; however, you may connect an additional Touchscreen Hub for a total of up to 16 OmniTouch touchscreens when used with an HAI OmniPro II or HAI Lumina Pro controller. The Touchscreen Hub is required for connecting OmniTouch with Video touchscreens.

The HAI Touchscreen Hub provides battery backed power for HAI OmniTouch touchscreens, cameras (optional), and the HAI Video Encoder. It has convenient connections and power terminals for a neat installation. It also has six individual camera inputs, which can be selected by the HAI OmniTouch Touchscreen with Video for viewing. Six individual camera outputs allow the cameras to be connected to a second HAI Touchscreen Hub with Video Encoder, HAI Web-Link II for viewing on a monitor or handheld device, HAI Home Control for Windows Media Center for viewing and recording, and/or directly to television sets, video recorders, etc.

The HAI Touchscreen Hub was designed to eliminate unsightly transformers, power strips, external power supplies, battery backup units, and complex wiring normally associated with camera and touchscreen installations. In addition to simplifying the installation, the HAI Touchscreen Hub automatically sequences the startup of touchscreens and has a low voltage cut out feature for long term reliability and zero maintenance.

GENERAL

The HAI Touchscreen Hub is available in an HAI Omni Series Enclosure or on the HAI Universal Mounting Plate for installation in Structured Wiring enclosures. It is supplied with a sealed Power Pack, which provides power to the HAI Touchscreen Hub.

Features:

1. Connections for 8 touchscreens: Cat 5 (RJ-45) for HAI OmniTouch 5.7 (53A00-1), HAI OmniTouch with Video (32A00-5) and 4-position terminals for HAI OmniTouch (32A00-1)
2. Inputs from 6 NTSC Composite color or b/w cameras
3. Pass-through outputs for 6 cameras to TV, modulator, media center, other displays, etc.
4. Power supply with battery back up for touchscreens and cameras
5. Connections for all Omni and Lumina controllers
6. Supports Video Encoder (mounts on Touchscreen Hub circuit board), required for video
7. Supervisory output can be connected to Omni zone to indicate low battery
8. Connectors for two sealed batteries, 12 V at 4 to 8 amp-hours each (not supplied)
9. Supplied with Universal Switching Power Pack

HAI Video Encoder

The HAI Video Encoder mounts onto the Touchscreen Hub. It digitizes video signals from the connected cameras and sends it to OmniTouch with Video touchscreens for viewing. It can be purchased bundled and factory installed on the Touchscreen Hub or added later in the field. The HAI Video Encoder is required to view video on OmniTouch with Video touchscreens.

INSTALLATION

NOTE: This unit has protection against static discharge in normal operation. However, use static discharge precautions during installation. Always touch the enclosure to discharge static before touching the connections.

NOTE: Do not make changes to terminal lock connections (TB1 – TB6) with power on! Disconnect power *AND* batteries first.

1. GROUNDING

Each Touchscreen Hub MUST be grounded to the controller. The HAI controller and HAI Touchscreen Hub(s) must be grounded together to prevent any current from flowing through the RS-485 data bus (connections A and B). If not grounded properly, damage could occur to the HAI controller, HAI Touchscreen Hub, and/or OmniTouch touchscreens.

Connect the “GND” terminal on the HAI Touchscreen Hub under the section marked “CONTROLLER”, to one of the “GND” terminals on the HAI controller.

2. COMMUNICATIONS CONNECTIONS


Connect the terminals labeled “A” and “B” on the HAI Touchscreen Hub under the section marked “CONTROLLER”, to the “A” and “B” terminals on the HAI controller.

Note: When connecting to an OmniLT, the terminal labeled “A” on the Touchscreen Hub connects to the “YEL” terminal and the terminal labeled “B” on the Touchscreen Hub connects to the “GRN” terminal under the section marked “CONSOLE” on the OmniLT controller.

The HAI Touchscreen Hub may be located in a remote location up to 800 feet from the HAI controller.


CAT 5 CONNECTORS
 OMNITOUCH 5.7 (53A00-1)
 OMNITOUCH WITH VIDEO (32A00-5)
 TERMINAL BLOCKS
 OMNITOUCH (32A00-1)

TERMINATING RESISTOR JUMPER
 CAMERA INPUT
 CAMERA OUTPUT

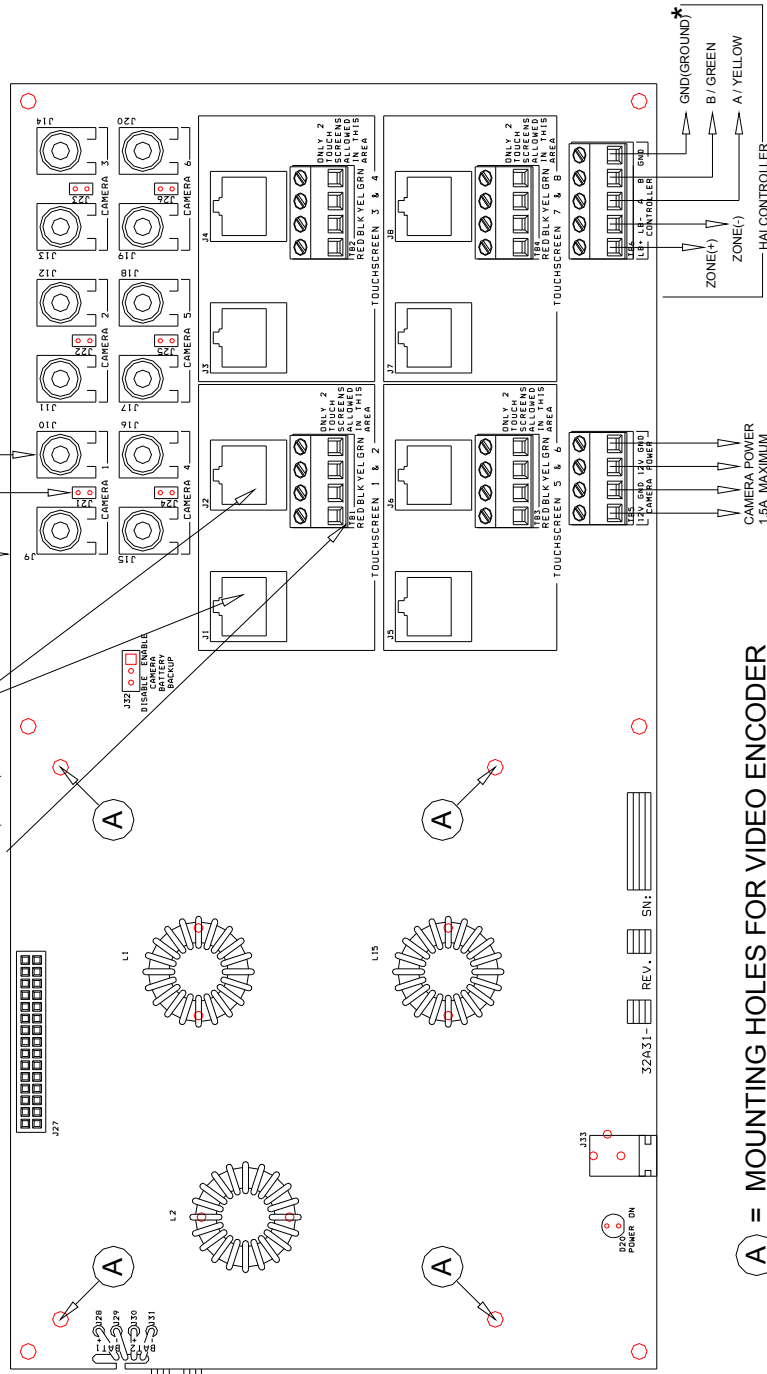

A = MOUNTING HOLES FOR VIDEO ENCODER

 * GND MUST BE CONNECTED TO GND ON HAI CONTROLLER



3. LOW BATTERY INDICATOR (Optional Connection)

When the backup batteries connected to the Touchscreen Hub become depleted, there are terminals on the Touchscreen Hub that are used to send a signal to the HAI controller to alert you of the low battery condition. To take advantage of this feature, you must have an extra pair of wire between the Touchscreen Hub and the HAI controller, and an available zone on the HAI controller.

Connect the terminals labeled “LB+” and “LB-” under the section marked “CONTROLLER” on the Touchscreen Hub to the “+” and “-” zone terminals of an available zone on the HAI controller. Do not use an end-of-line resistor on the zone. The touchscreen has a built-in 1K ohm resistor for this output. Configure the zone as a “Trouble” zone.

When the batteries on the Touchscreen Hub fall below a certain voltage threshold, the terminals “LB+” and “LB-” will open causing the zone on the HAI controller to trip, indicating a low battery condition on the Touchscreen Hub.

4. TOUCHSCREEN CONNECTIONS

Connections to touchscreens are divided into 4 different areas, labeled: “Touchscreens 1 & 2”, “Touchscreens 3 & 4”, “Touchscreens 5 & 6”, and “Touchscreens 7 & 8”. Each area can have a maximum of 2 touchscreens connected in it. OmniTouch 5.7 (53A00-1) and OmniTouch with video (32A00-5) are connected to the Category 5 connectors. OmniTouch (32A00-1) is connected to the terminal block (red, black, yellow, green).

Connections to OmniTouch with Video (32A00-5), OmniTouch 5.7 (53A00-1)

These touchscreens require Cat-5 (4-pair) cable for operation. The Cat-5 cable provides power, communications, and the video signal from the HAI Touchscreen Hub to the touchscreen.

Run the Cat-5 cable between the touchscreen and the HAI Touchscreen Hub. The maximum distance between the Touchscreen Hub and each touchscreen is 800 feet.

Note: When calculating the distance between the Touchscreen Hub and a touchscreen, you must subtract the distance between the Touchscreen Hub and the HAI controller from the total distance. For example, if the Touchscreen Hub is 100 feet from the controller, the maximum distance between the Touchscreen hub and each touchscreen is 700 feet.

Terminate both ends of the Cat-5 cable with an 8-position modular connector (as if to make a standard network cable).

Connect the OmniTouch Touchscreen to the HAI Touchscreen Hub, by inserting the modular connector into the touchscreen and into one of the RJ-45 connectors (J1-J8) on the HAI Touchscreen Hub.

Note: Do not connect more than 2 touchscreens in a given area (see “Touchscreen Connections”).

Connecting to OmniTouch (32A00-1)

When connecting a standard OmniTouch to the Touchscreen Hub, it is very important to plan where the OmniTouch touchscreen will be installed and the gauge/type of wire you will use for the installation.

The touchscreen requires a minimum of 4 wires for operation (2 for power and 2 for communications). The required distance between the Touchscreen Hub and the touchscreen will determine the wire gauge/type you should use. To prevent the touchscreen from drawing more than the specified maximum current from the Touchscreen Hub, do not exceed the "Maximum Cable Length" based on the wire gauge/type according to the "Table 1".

Wire Gauge	Solid/ Stranded	Number of positive conductors	Number of ground conductors	Maximum Cable Length (feet)
24	solid	1	1	398
24	solid	2	2	800
24	solid	3	3	1000
22	solid	1	1	634
22	solid	2	2	1000
22	stranded	1	1	585
20	solid	1	1	1000
20	stranded	1	1	904
18	solid	1	1	1000
18	stranded	1	1	1000
16	solid	1	1	1000
16	stranded	1	1	1000

If cable with multiple conductors is used (such as Cat-5 cable), it is possible to connect multiple conductors together to achieve greater distance. For example, using only one of the 24 gauge conductor in the Cat-5 cable for power (1 for positive and 1 for ground), the maximum distance between the controller and the touchscreen is 398 feet. If you were to connect 2 of the 24 gauge conductors together (2 for positive and 2 for ground), the maximum distance between the controller and the touchscreen is then 800 feet. If you were to connect 3 of the 24 gauge conductors together (3 for positive and 3 for ground), the maximum distance between the controller and the touchscreen is then 1000 feet.

Note: The distance between the Touchscreen Hub and HAI controller combined with the distance between the Touchscreen Hub and a touchscreen, must never exceed a maximum distance of 1000 feet. When calculating the distance between the Touchscreen Hub and a touchscreen, you must subtract the distance between the Touchscreen Hub and the HAI controller from the "Maximum Cable Length" as listed in "Table 1".

Connect the "Red", "Black", "Yellow", and "Green" wires from the touchscreen to the "RED", "BLK", "YEL" and "GRN" terminals on the Touchscreen Hub, respectively.

Note: Do not connect more than 2 touchscreens in a given area (see "Touchscreen Connections").

5. CAMERA CONNECTIONS

The Touchscreen Hub takes the composite signal from any NTSC camera, digitizes it through the encoder, and then broadcasts it to the connected OmniTouch with Video or OmniTouch 5.7 touchscreens. The Touchscreen Hub supports 6 individual cameras. In the areas marked CAMERA 1 – CAMERA 6, there is a connector for the camera input (to connect the camera) and the camera output (to connect the video signal to additional devices).

Camera Inputs

Connect NTSC composite cameras to the RCA connectors marked J9 (Camera 1), J11 (Camera 2), J13 (Camera 3), J15 (Camera 4), J17 (Camera 5), and J19 (Camera 6) on the Touchscreen Hub.

Each camera input has a terminating resistor installed at the factory for optional video performance. If the corresponding camera output is not being used, make sure that the respective terminating resistor jumper (J21 - J26) is installed (this is the default position from the factory).

Camera Outputs

Each of the 6 camera inputs also has a pass-through output. These outputs are used to connect a second HAI Touchscreen Hub, HAI Web-Link II for viewing on a monitor or handheld device, HAI Home Control for Windows Media Center for viewing and recording, and/or directly to television sets, video recorders, etc.

Using the on-board RCA connectors, connect camera outputs marked J10 (Camera 1), J12 (Camera 2), J14 (Camera 3), J16 (Camera 4), J18 (Camera 5), and J20 (Camera 6) to your additional source device(s) (e.g. video modulator, second HAI Touchscreen Hub, etc.).

When the video output is being used to connect a second source, remove the corresponding terminating resistor jumper J21 – J26.

Camera Power

The Touchscreen Hub has terminals to provide camera power to 12 VDC cameras. The camera power supply is also battery backed; however, this can be disabled so that the connected touchscreens run longer on the backup battery.

To power a 12 VDC camera from the Touchscreen Hub, connect the camera's power leads to the terminals labeled "12V" and "GND" under the section marked "Camera Power", observing proper polarity. The camera power supply can supply a maximum of 1.5 A to the connected cameras.

By default, the Touchscreen Hub is set to battery backup camera power when AC power is disconnected. To disable the battery backup of camera power, set the jumper marked "J32" to the "DISABLE" position (the leftmost and center pin). In this configuration, you will not be able to view cameras when AC power is disconnected.

6. CONNECTING A SECOND HAI TOUCHSCREEN HUB

When connecting more than 8 OmniTouch with Video touchscreens to an HAI OmniPro II or HAI Lumina Pro controller, a second Touchscreen Hub is required. To view video on the additional OmniTouch with Video touchscreens (the ones connected to the second Touchscreen Hub), a Video Encoder installed on the second Touchscreen Hub is required.

When connecting a second Touchscreen Hub, with the exception of cameras, make all other connections as described in this document.


To view video on OmniTouch with Video touchscreens that are connected to the second Touchscreen Hub with Video Encoder, connect the camera outputs from the first Touchscreen Hub to the camera inputs on the second Touchscreen Hub. Make sure that you remove the corresponding terminating resistor jumper J21 – J26 from the first Touchscreen Hub.

7. INSTALLING THE 32A32-2 HAI VIDEO ENCODER

If you have purchased the HAI Video Encoder separately from the Touchscreen Hub, install the Video Encoder as follows:

1. Disconnect power and batteries.
2. Insert the short end of each of the 4 supplied nylon standoffs into the mounting holes on the Touchscreen Hub. Make sure that the standoff snaps into the mounting holes.
3. With the pins (marked “J2 ALT”) on the Video Encoder faced down, align the mounting holes on the Video Encoder with the installed standoffs on the Touchscreen Hub. Rest the Video Encoder board on the standoffs.
4. Align the pins (marked “J2 ALT”) on the Video Encoder with the connector (marked “J27”) in the Touchscreen Hub.
5. Gently push down so that the pins (marked “J2 ALT”) are firmly seated into the connector (marked “J27”).
6. Push down on the Video Encoder board at the locations of each mounting hole, so that each of the standoffs snaps into the mounting holes.

(Connections Diagram on Next Page)

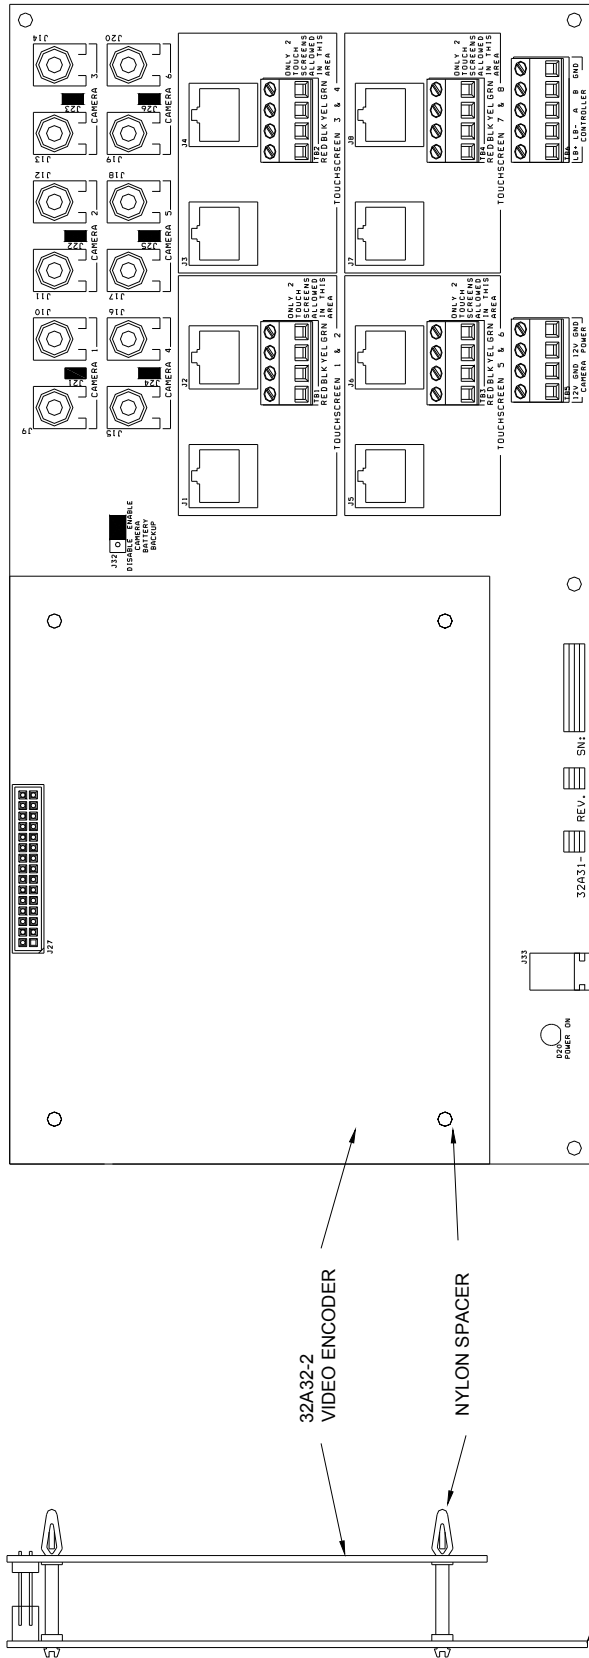

32A32-2
VIDEO ENCODER

NYLON SPACER

32A30-1, -2, -3, -4
TOUCHSCREEN HUB

J37 OSMONTECH
BATTERY GROUP

J14 CAMERA 1

J15 CAMERA 2

J16 CAMERA 3

J17 CAMERA 1

J18 CAMERA 2

J19 CAMERA 3

J20 CAMERA 1

J21 CAMERA 2

J22 CAMERA 3

J23 CAMERA 1

J24 CAMERA 2

J25 CAMERA 3

J26 CAMERA 1

J27 CAMERA 2

J28 CAMERA 3

J29 TOUCHSCREEN 1 & 2

J30 TOUCHSCREEN 3 & 4

J31 TOUCHSCREEN 1 & 2

J32 TOUCHSCREEN 3 & 4

J33 TOUCHSCREEN 1 & 2

J34 TOUCHSCREEN 3 & 4

J35 TOUCHSCREEN 1 & 2

J36 TOUCHSCREEN 3 & 4

J37 TOUCHSCREEN 1 & 2

J38 TOUCHSCREEN 3 & 4

J39 TOUCHSCREEN 1 & 2

J40 TOUCHSCREEN 3 & 4

J41 TOUCHSCREEN 1 & 2

J42 TOUCHSCREEN 3 & 4

J43 TOUCHSCREEN 1 & 2

J44 TOUCHSCREEN 3 & 4

J45 TOUCHSCREEN 1 & 2

J46 TOUCHSCREEN 3 & 4

J47 TOUCHSCREEN 1 & 2

J48 TOUCHSCREEN 3 & 4

J49 TOUCHSCREEN 1 & 2

J50 TOUCHSCREEN 3 & 4

J51 TOUCHSCREEN 1 & 2

J52 TOUCHSCREEN 3 & 4

J53 TOUCHSCREEN 1 & 2

J54 TOUCHSCREEN 3 & 4

J55 TOUCHSCREEN 1 & 2

J56 TOUCHSCREEN 3 & 4

J57 TOUCHSCREEN 1 & 2

J58 TOUCHSCREEN 3 & 4

J59 TOUCHSCREEN 1 & 2

J60 TOUCHSCREEN 3 & 4

J61 TOUCHSCREEN 1 & 2

J62 TOUCHSCREEN 3 & 4

J63 TOUCHSCREEN 1 & 2

J64 TOUCHSCREEN 3 & 4

J65 TOUCHSCREEN 1 & 2

J66 TOUCHSCREEN 3 & 4

J67 TOUCHSCREEN 1 & 2

J68 TOUCHSCREEN 3 & 4

J69 TOUCHSCREEN 1 & 2

J70 TOUCHSCREEN 3 & 4

J71 TOUCHSCREEN 1 & 2

J72 TOUCHSCREEN 3 & 4

J73 TOUCHSCREEN 1 & 2

J74 TOUCHSCREEN 3 & 4

J75 TOUCHSCREEN 1 & 2

J76 TOUCHSCREEN 3 & 4

J77 TOUCHSCREEN 1 & 2

J78 TOUCHSCREEN 3 & 4

J79 TOUCHSCREEN 1 & 2

J80 TOUCHSCREEN 3 & 4

J81 TOUCHSCREEN 1 & 2

J82 TOUCHSCREEN 3 & 4

J83 TOUCHSCREEN 1 & 2

J84 TOUCHSCREEN 3 & 4

J85 TOUCHSCREEN 1 & 2

J86 TOUCHSCREEN 3 & 4

J87 TOUCHSCREEN 1 & 2

J88 TOUCHSCREEN 3 & 4

J89 TOUCHSCREEN 1 & 2

J90 TOUCHSCREEN 3 & 4

J91 TOUCHSCREEN 1 & 2

J92 TOUCHSCREEN 3 & 4

J93 TOUCHSCREEN 1 & 2

J94 TOUCHSCREEN 3 & 4

J95 TOUCHSCREEN 1 & 2

J96 TOUCHSCREEN 3 & 4

J97 TOUCHSCREEN 1 & 2

J98 TOUCHSCREEN 3 & 4

J99 TOUCHSCREEN 1 & 2

J100 TOUCHSCREEN 3 & 4

32A31- REV. SN:

J31 POWER OK

J32 CAMERA PWR

J33 CAMERA PWR

J34 CAMERA PWR

J35 CAMERA PWR

J36 CAMERA PWR

J37 CAMERA PWR

J38 CAMERA PWR

J39 CAMERA PWR

J40 CAMERA PWR

J41 CAMERA PWR

J42 CAMERA PWR

J43 CAMERA PWR

J44 CAMERA PWR

J45 CAMERA PWR

J46 CAMERA PWR

J47 CAMERA PWR

J48 CAMERA PWR

J49 CAMERA PWR

J50 CAMERA PWR

J51 CAMERA PWR

J52 CAMERA PWR

J53 CAMERA PWR

J54 CAMERA PWR

J55 CAMERA PWR

J56 CAMERA PWR

J57 CAMERA PWR

J58 CAMERA PWR

J59 CAMERA PWR

J60 CAMERA PWR

J61 CAMERA PWR

J62 CAMERA PWR

J63 CAMERA PWR

J64 CAMERA PWR

J65 CAMERA PWR

J66 CAMERA PWR

J67 CAMERA PWR

J68 CAMERA PWR

J69 CAMERA PWR

J70 CAMERA PWR

J71 CAMERA PWR

J72 CAMERA PWR

J73 CAMERA PWR

J74 CAMERA PWR

J75 CAMERA PWR

J76 CAMERA PWR

J77 CAMERA PWR

J78 CAMERA PWR

J79 CAMERA PWR

J80 CAMERA PWR

J81 CAMERA PWR

J82 CAMERA PWR

J83 CAMERA PWR

J84 CAMERA PWR

J85 CAMERA PWR

J86 CAMERA PWR

J87 CAMERA PWR

J88 CAMERA PWR

J89 CAMERA PWR

J90 CAMERA PWR

J91 CAMERA PWR

J92 CAMERA PWR

J93 CAMERA PWR

J94 CAMERA PWR

J95 CAMERA PWR

J96 CAMERA PWR

J97 CAMERA PWR

J98 CAMERA PWR

J99 CAMERA PWR

J100 CAMERA PWR

J101 CAMERA PWR

J102 CAMERA PWR

J103 CAMERA PWR

J104 CAMERA PWR

J105 CAMERA PWR

J106 CAMERA PWR

J107 CAMERA PWR

J108 CAMERA PWR

J109 CAMERA PWR

J110 CAMERA PWR

J111 CAMERA PWR

J112 CAMERA PWR

J113 CAMERA PWR

J114 CAMERA PWR

J115 CAMERA PWR

J116 CAMERA PWR

J117 CAMERA PWR

J118 CAMERA PWR

J119 CAMERA PWR

J120 CAMERA PWR

J121 CAMERA PWR

J122 CAMERA PWR

J123 CAMERA PWR

J124 CAMERA PWR

J125 CAMERA PWR

J126 CAMERA PWR

J127 CAMERA PWR

J128 CAMERA PWR

J129 CAMERA PWR

J130 CAMERA PWR

J131 CAMERA PWR

J132 CAMERA PWR

J133 CAMERA PWR

J134 CAMERA PWR

J135 CAMERA PWR

J136 CAMERA PWR

J137 CAMERA PWR

J138 CAMERA PWR

J139 CAMERA PWR

J140 CAMERA PWR

J141 CAMERA PWR

J142 CAMERA PWR

J143 CAMERA PWR

J144 CAMERA PWR

J145 CAMERA PWR

J146 CAMERA PWR

J147 CAMERA PWR

J148 CAMERA PWR

J149 CAMERA PWR

8. POWER CONNECTIONS

The supplied Power Pack provides both touchscreen (24VDC) and camera (12VDC) power. An AC power outlet should be located within 5 feet. One or two sealed, rechargeable batteries (not included) can be used to backup the touchscreen and camera (optional) power. The two battery cables are in parallel, so by adding a second battery you will increase the battery backup time.

1. Connect one or two 12VDC batteries using the supplied battery terminals. Connect the BLACK battery wire to the minus (-) terminal on the battery and connect the RED battery wire to the plus (+) terminal on the battery. DO NOT reverse the connections; the battery fuse will blow. Note that the unit will NOT START on the battery alone.
2. Plug the connector for the Power Pack into the mating connector of the HAI Touchscreen Hub marked "J33".
3. Plug the power cord from the Power Pack into a 120 VAC outlet. The "POWER ON" LED should illuminate.
4. Unplug the Power Pack. The Touchscreen Hub should continue to run off of the battery backup. The "POWER ON" LED should turn off.

Plug in the Power Pack. The system should start. The "POWER ON" LED should illuminate.

SPECIFICATIONS

Operating Ranges: 32 - 120 degrees F (0 - 49 degrees C)
10 - 85 % relative humidity, non-condensing

Power Pack: Output 19VDC, 3.79 Amps, Max 72W
Input 120VAC, 1.8A amps, 60Hz

Maximum Power: 72 Watts

Batteries: Sealed, Rechargeable, 12 volts, 4 - 8 amp-hours each

Low Voltage Cut Out: 10VDC

Main Fuse: 5A Polyfuse

Battery Fuses: 5A Polyfuse

Polyfuses are permanent fuses that do not need replacement.

Camera Power: Nominal Voltage 12VDC
Maximum Current 1.5A