




Model 94A01-1 OmniTouch 10pe Docking Cradle

DESCRIPTION

The optional 94A01-1 OmniTouch 10pe Docking Cradle is used to secure the OmniTouch 10pe in an upright position, while providing power to the unit, charging the battery, and connecting accessories. When the optional 94A01-1 Docking Cradle is used, the OmniTouch 10pe Touchscreen should be placed in the cradle while it's not in use.

Note:


When inserting the OmniTouch 10pe into the docking cradle, push down firmly. The power LED on the OmniTouch 10pe will blink green when the battery is charging.

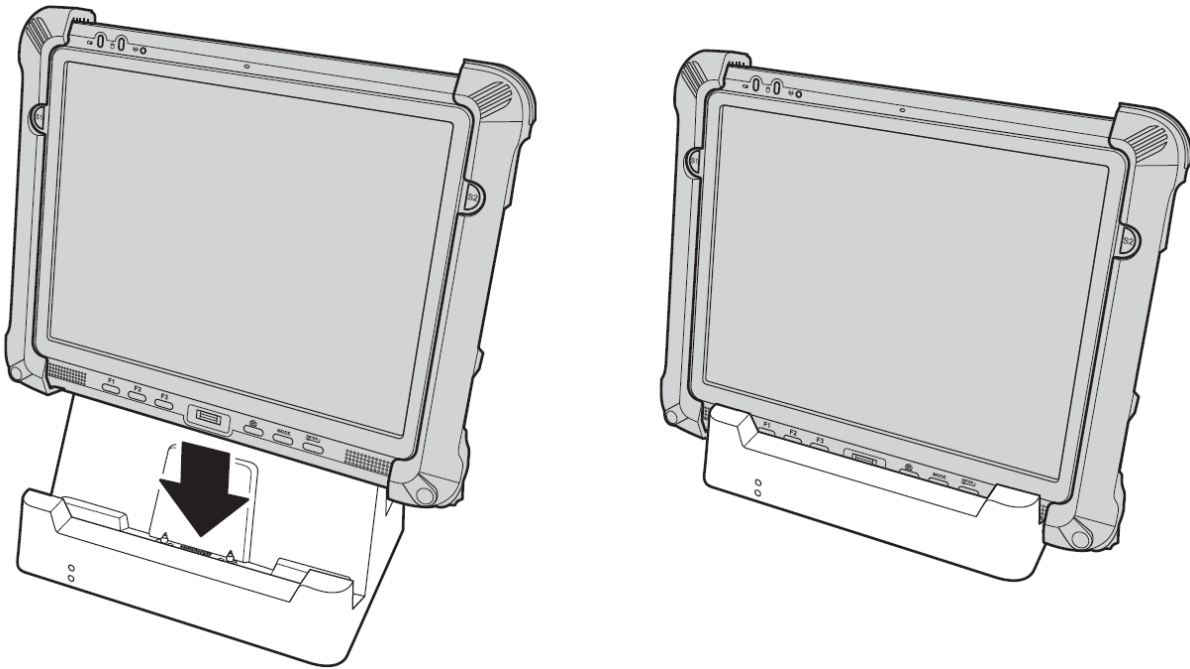

CHARGING THE EXTERNAL BATTERY


To charge the external battery, attach the battery to the docking stand as shown.

The external battery can also be charged when installed on the OmniTouch 10pe.

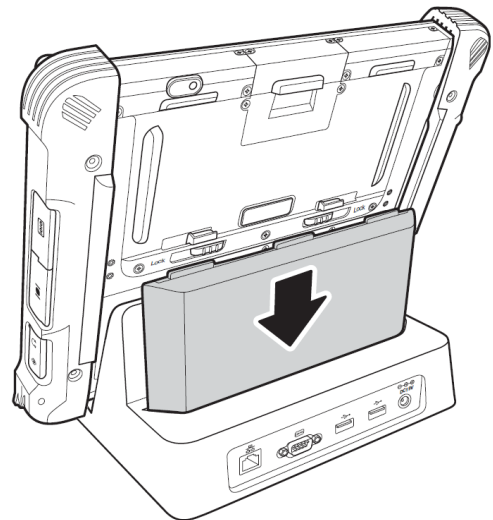

DOCKING CONNECTORS

See below for the rear view of the docking and a description of all ports and connectors.

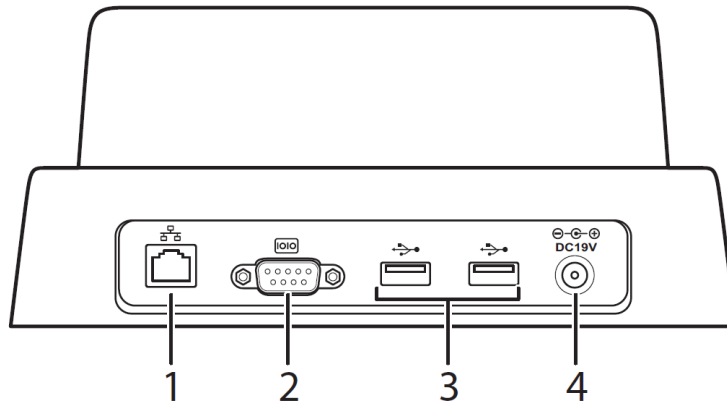

Number	Component	Description
1	LAN Port	Connect an RJ-45 cable between the LAN connector and a port on the local network.
2	Serial port	Connect a serial cable to connect another PC or serial device.
3	USB ports (host)	These ports connect to USB devices. Connect USB type A connectors to these ports.
4	Power jack	The AC adapter connects to this jack to provide power to the OmniTouch 10pe and to charge its battery when it's inserted into the docking cradle.